

## Calibration Tool User Guide

Run Calibration Tool and plug in touch frame, as shown in **Figure 1.1**. if device isn't plugged in, "No Device Found" message will appear as shown in **Figure 1.2**.

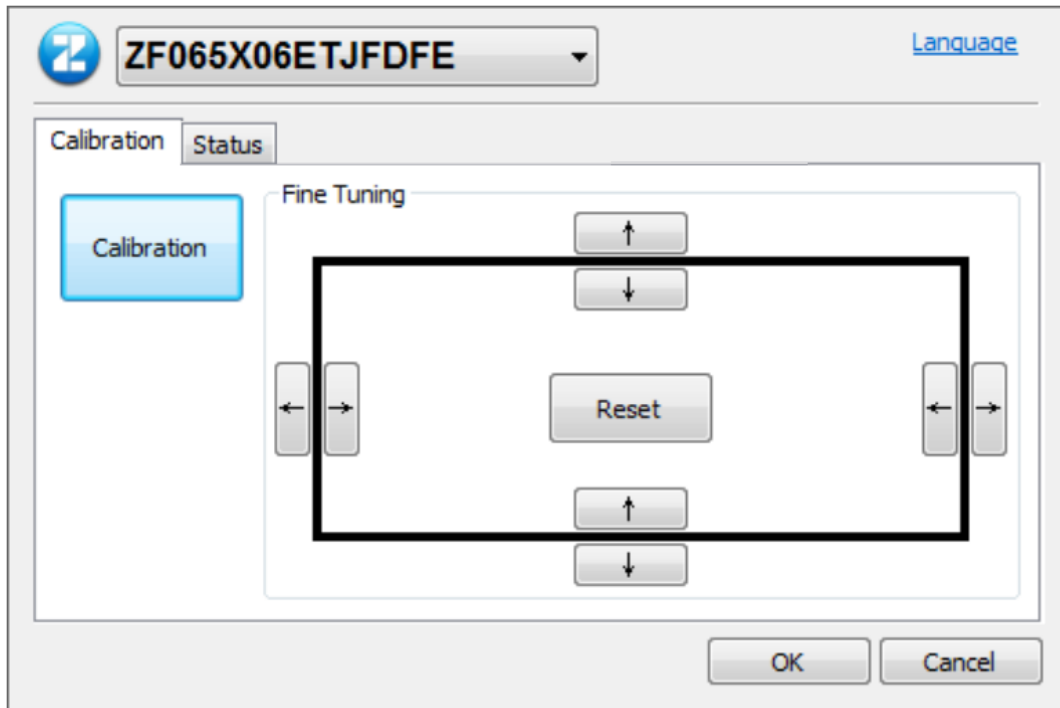


Figure 1.1

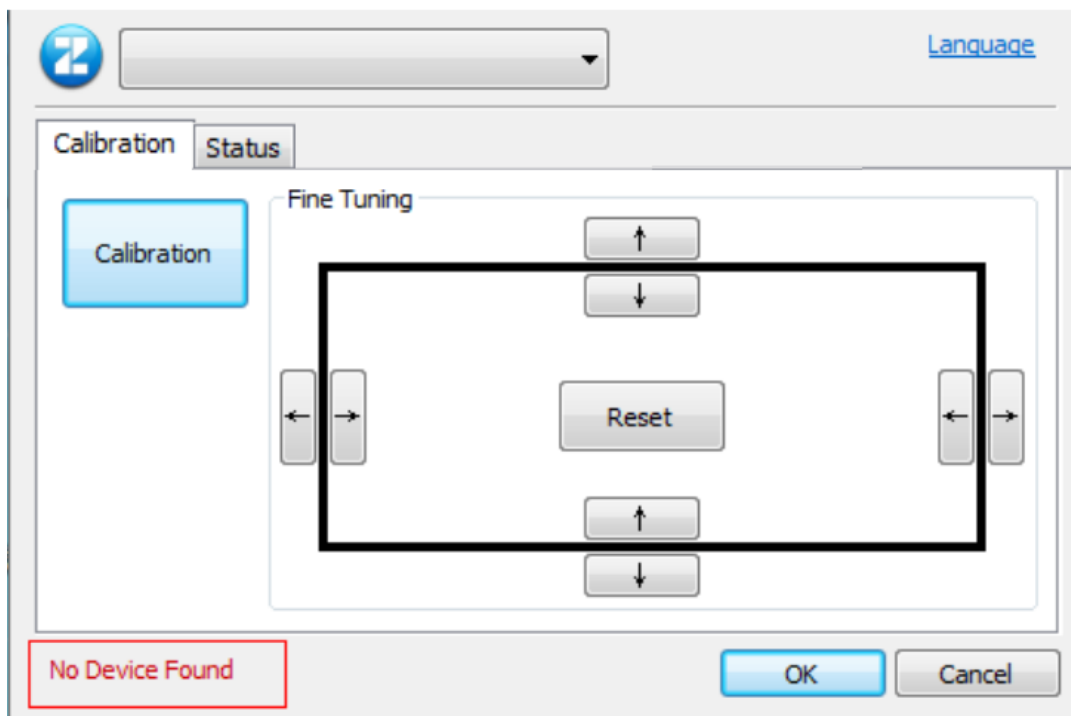


Figure 1.2

Click “Calibration” tab to start calibration. Calibration screen will appear as shown in **Figure 2.1**.

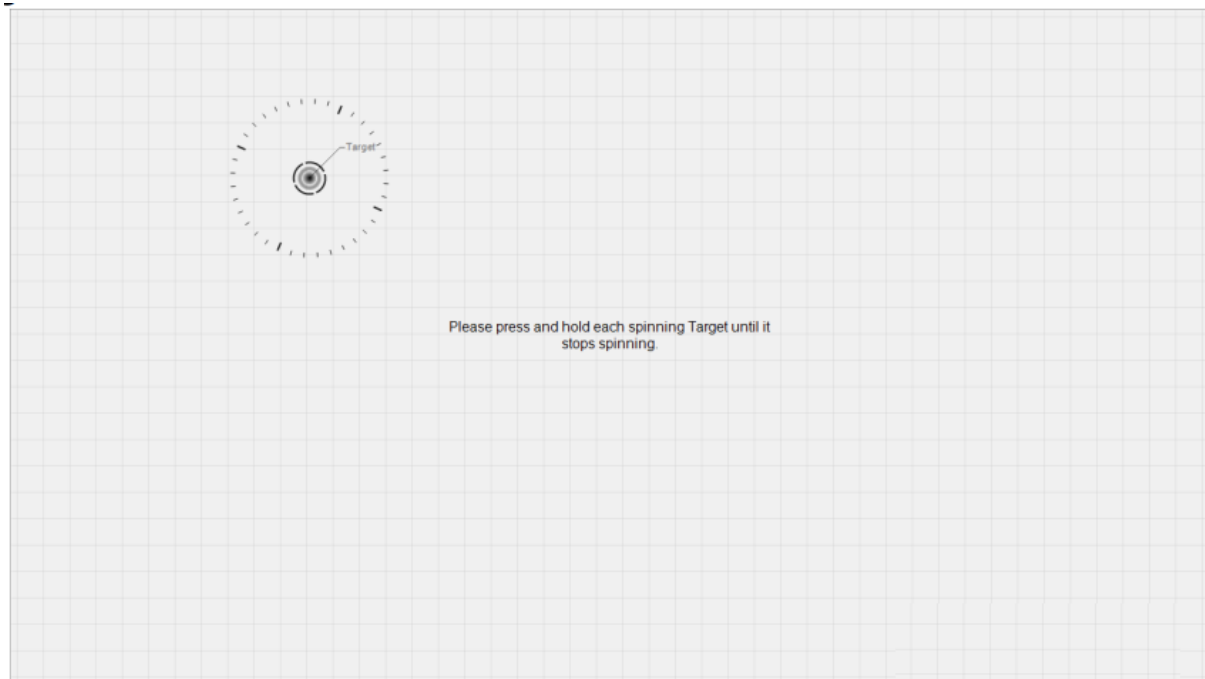


Figure 2.1

Press center of the circle until it stops rotating and follow the next circle points. After pressing 4th circle point, calibration will be done. Press “Esc” to cancel calibration.

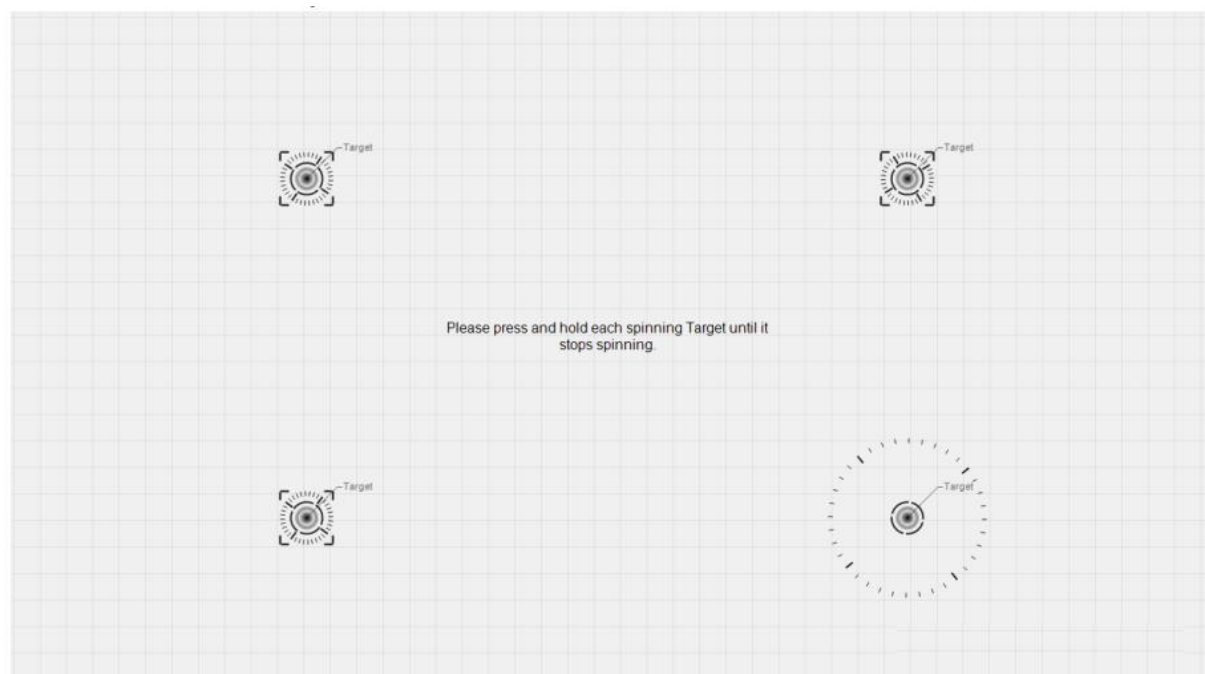


Figure 2.2

Fine tuning area on the right is to be used as auxiliary calibration to fit touch active area if sensitivity adjustment is needed. Click arrows to move touch area accordingly. If touch area exceeds the limit, a message will appear as shown in **Figure 3.1**.

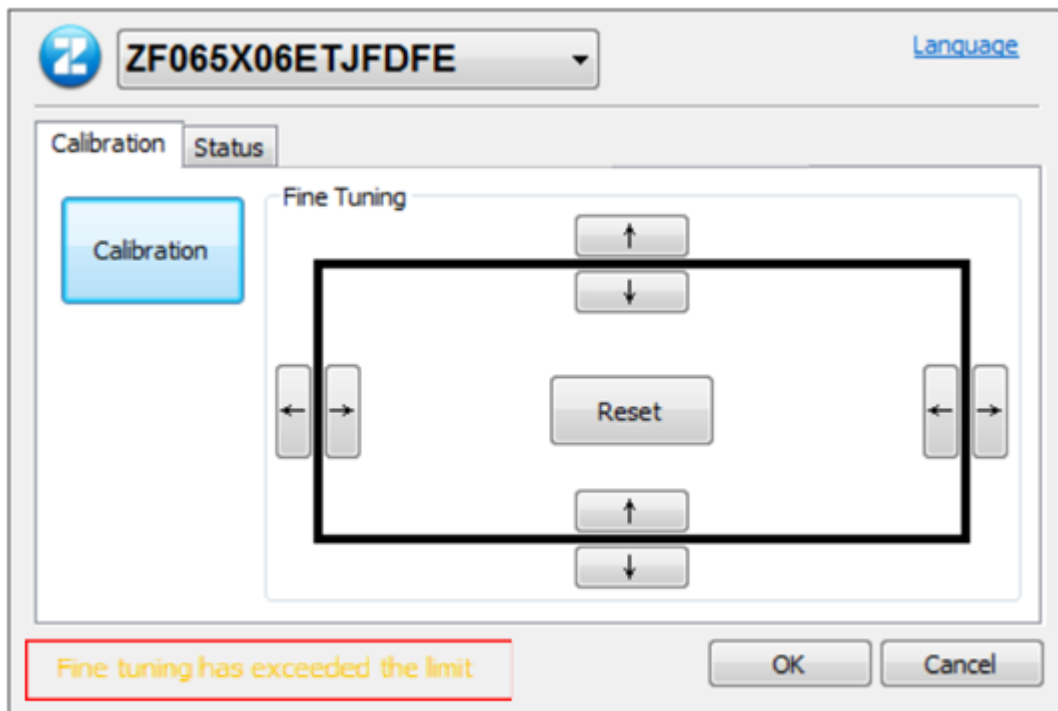


Figure 3.1

Press 【 Reset 】 button to clear fine tuning and return to the original state. Confirmation message will appear as shown **Figure 3.2**.

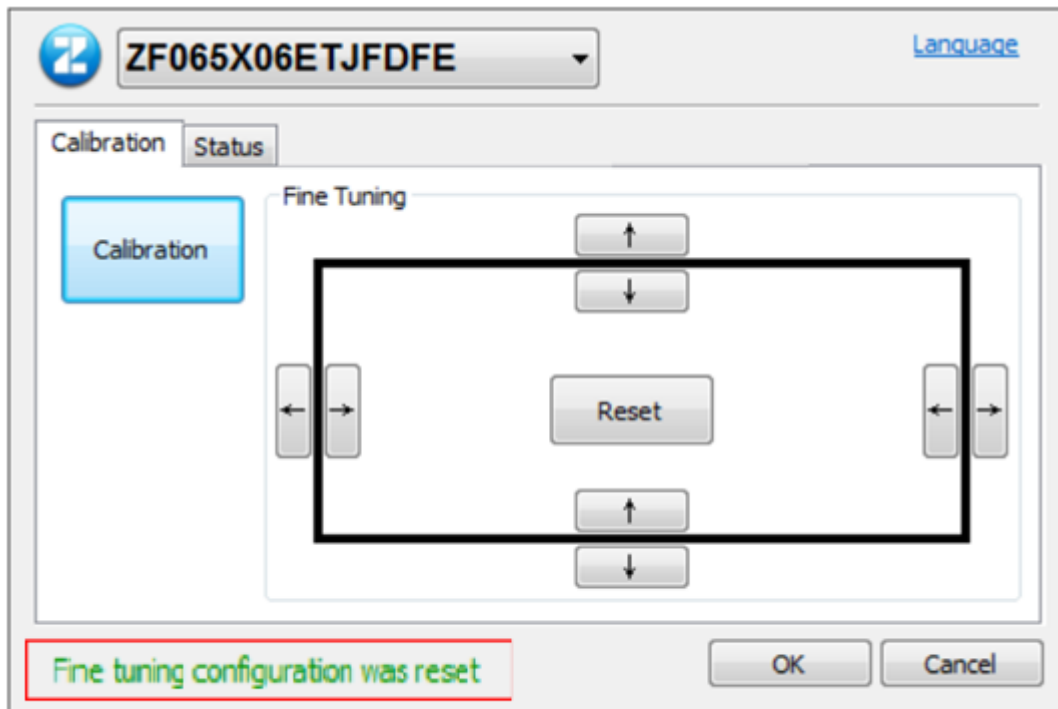


Figure 3.2

Status tab shows touch device serial number and SW versions as shown **Figure 4.1**. Click “copy to clipboard” and then “Save As” to save device informations as .txt file.

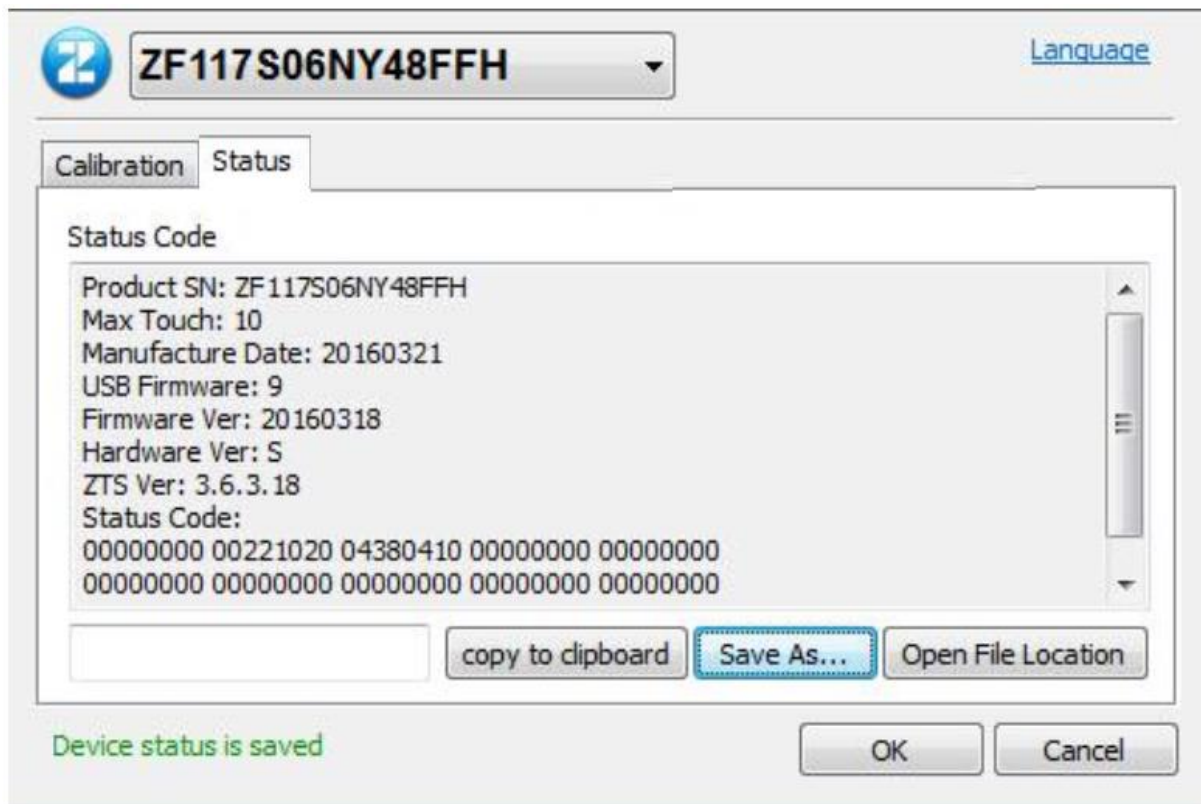


Figure 4.1